



Construction Attachment Division

21307 87th Ave SE, Woodinville, WA 98072-8021
Ph:(425)486-1232 Fax: (425)486-0803 (800)373-3514
Website: www.psmcorp.com E-mail: info@psmcorp.com

Service Bulletin

7/2/2019

Wedgelock Quick Coupler Controller Information

This bulletin provides information about checking and setting the timer for the Wedgelock Quick Coupler controller, as well as retrofit wiring information in the event that replacement is necessary.

Checking and Setting the Timer

It is recommended that you check the timer and set to 10 seconds at initial installation and if the controller is replaced for any reason.

To check the timer:

- Turn the key on, but do not start the engine.
- Activate the Lock Out switch. The controller should start beeping at 1 beep per second.
- Activate the Momentary switch for more than 1 second. The controller should start beeping at 2 beeps per second, and should stop at 20 beeps and return to 1 beep per second.

To set the timer:

- Turn the key on, but do not start the engine.
- Press and hold the Momentary switch.
- Activate the Lock Out switch. The controller should beep quickly 4 times and then 1 beep per second.
- Release the Momentary switch at 10 seconds. The controller should beep quickly 4 times signifying that the timer is set.

If you cannot set the timer, or have any other problems with this procedure, please do not hesitate to contact one of our Service Representatives. Contact information can be found at the top of this page.

Retrofit Wiring Instructions

